




Impermeable deposits, basically clay overlying shale or shaley sand provides a very poor area for even minimal domestic supplies. Brackish and dry wells are common. Storage is necessary to supply peak daily dem

AREAS IN WHICH BRACKISH AND SALT WATER HAVE BEEN ENCOUNTERED

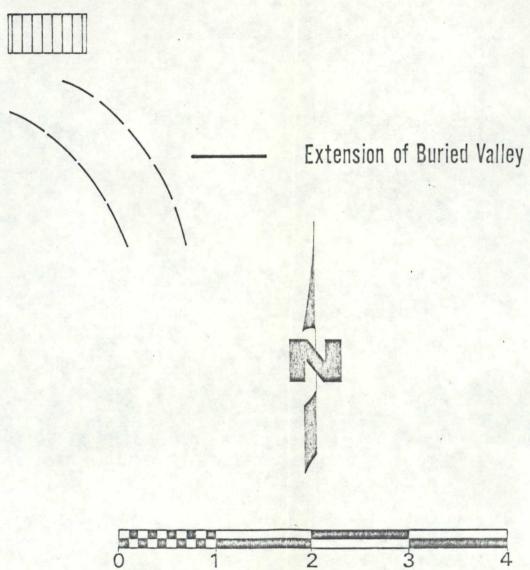

Contour Interval: 10 feet

Scale in miles

